

THERMAL REMOVAL

WATER THERMAL REMOVAL

ahlbergcameras.com/products/software/thermal-removal



The Thermal Removal software is primarily used to facilitate reading of fuel assembly numbers during core mapping. The natural creation of thermals in the water can be disturbing when numbers or assembly details are seen, this software reduces this negative effect on the visibility.

MORE INFORMATION ABOUT THERMAL REMOVAL

SPECIFICATIONS

APPLICATIONS

• The Thermal Removal software is a part of the Inspection Station

BENEFITS

 Facilitates reading of fuel assembly numbers during core mapping

We reserve the right to alter specifications without prior notice

Main office | Phone: +46 176 20 55 00 Email: main@ahlbergcameras.com US office | Phone: +1 910-399-4240 Email: us@ahlbergcameras.com Service office | Phone: +46 176 20 55 00

Email: rd@ahlbergcameras.com

THERMAL REMOVAL IMAGES



We reserve the right to alter specifications without prior notice

Main office | Phone: +46 176 20 55 00 Email: main@ahlbergcameras.com

US office | Phone: +1 910-399-4240 Email: us@ahlbergcameras.com Service office | Phone: +46 176 20 55 00 Email: rd@ahlbergcameras.com